UNAPPROVED INSERT

CYLINDER HEAD REPLACEMENT (CONT)

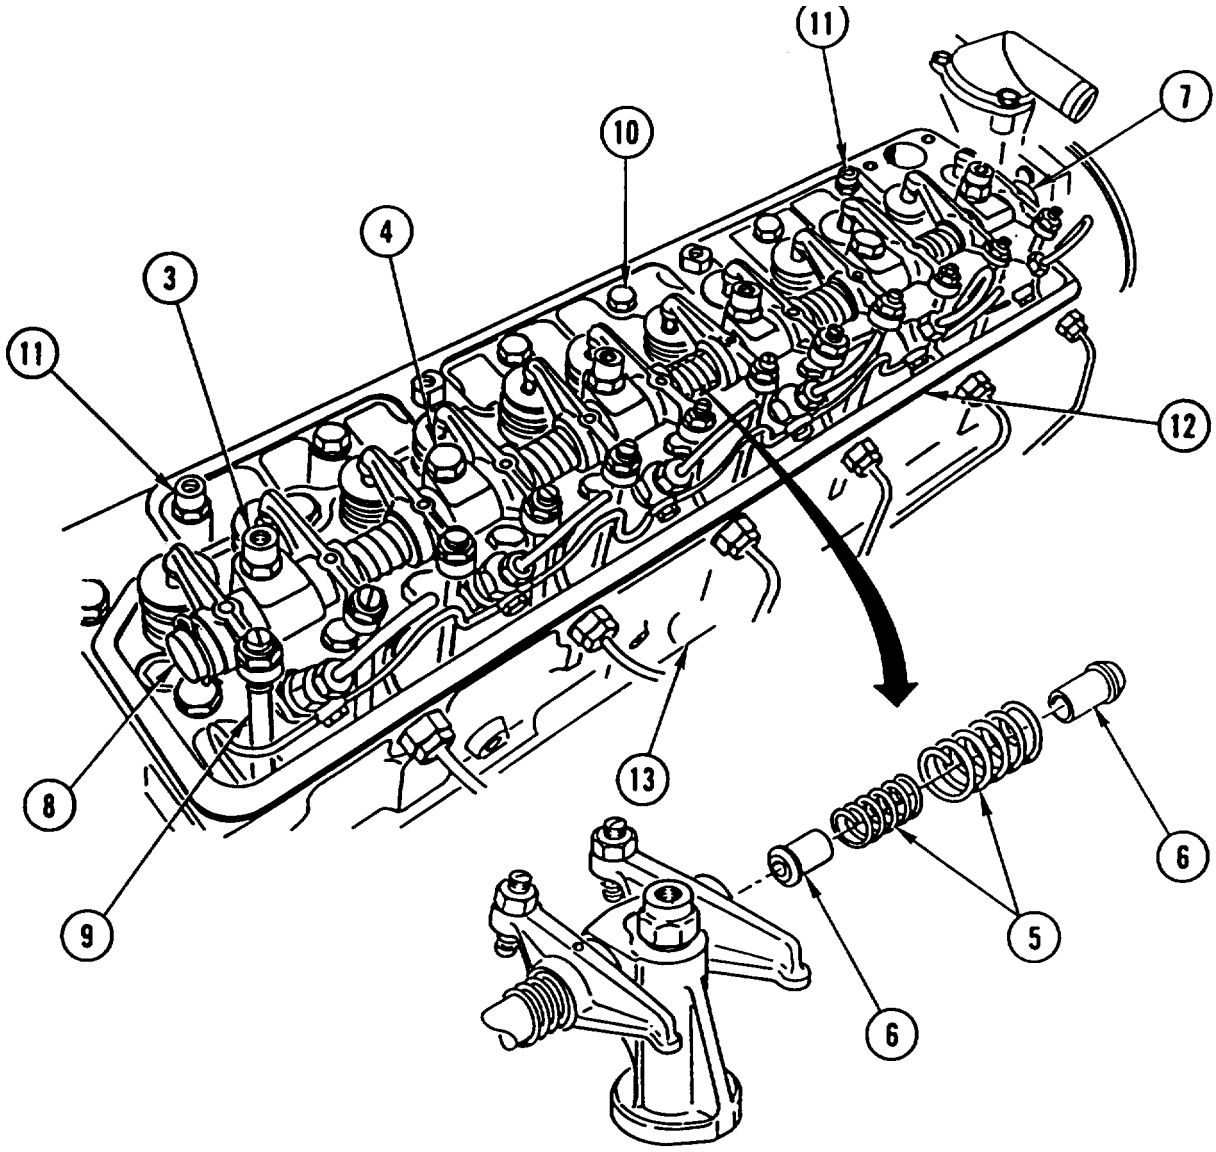

NOTE

Remove rocker arm assemblies one at a time.

2. REMOVE four bolts (3), two bolts (4), two springs (5), two nipples (6), and rocker ARM assemblies (7 and 8).

NOTE

Tag push rods prior to removal to aid in installation.

3. REMOVE 12 push RODS (9).

4. REMOVE 23 BOLTS (10) and 2 BOLTS (11) from cylinder head (12).

NOTE: DISCARD BOLTS WITH SIX POINT HEADS.

5. REMOVE cylinder HEAD (12) and gasket (13). DISCARD GASKET.